


Jumpers on the PiFace-Rack are set as follow to allow external power:

JP9: 2+3
JP10: 2+3
JP11: 2+3
JP12: 2+3

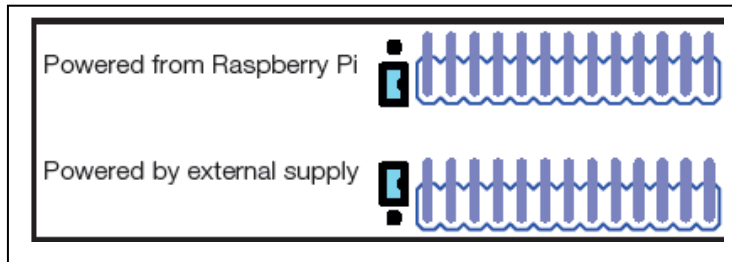


Jumper Order



JP 9, 10, 11, 12

Jumpers on the PiFace-Rack are set as follow to allow external Default SPI CE:

JP1: 2+3 JP2: 2+3
JP3: 2+3 JP4: 2+3
JP5: 2+3 JP6: 2+3
JP7: 2+3 JP8: 2+3

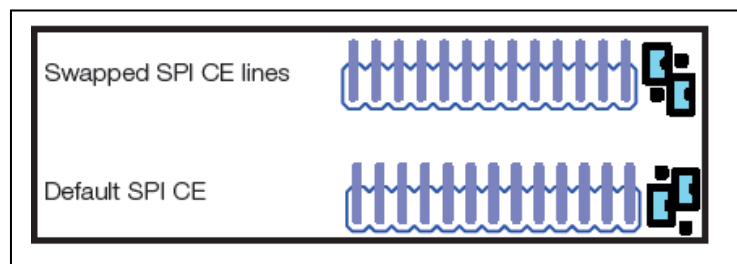

Jumper Order



JP 2 JP 1
JP 4 JP 3
JP 6 JP 5
JP 8 JP 7

Jumpers on the PiFace are set as follow to set address for every SPI chip:

PiFace_0: JP1: 2+3
 JP2: 2+3

PiFace_1: JP1: 1+2
 JP2: 2+3

PiFace_3: JP1: 2+3
 JP2: 1+2

